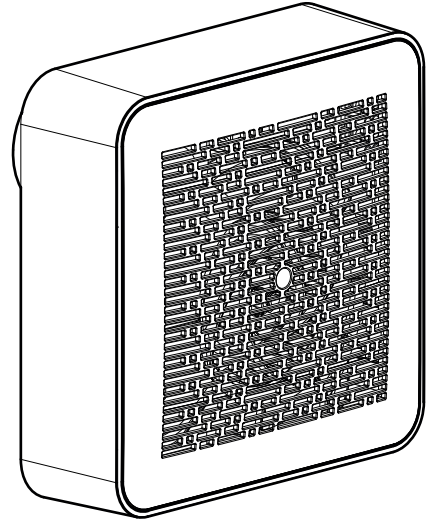


P06542000

GO.ERRE



COSMO-e

EP S.p.A.
Via Del Commercio 1, 25039 - Travagliato (BS) Italy
tel. +39 030 68 62 341 - fax +39 030 68 62 051 | www.oerre.it - vendite@oerre.it

IT Prima di procedere con l'installazione leggere attentamente il manuale delle avvertenze generali. Read the precautions manual carefully before installing this appliance.

FR Avant de procéder à l'installation, il faut lire attentivement le manuel des instructions générales. Bitte lesen Sie sich die Sicherheitshinweise der Gebrauchsanleitung aufmerksam durch, bevor Sie das Gerät installieren.

NL Lees de handleiding met voorzorgsmaatregelen zorgvuldig vooraf u dit apparaat installeert. DA Læs venligst vejledningen grundigt, inden installation af dette produkt.

ES Lea detenidamente el manual de advertencias antes de instalar este aparato.

EL Διαβάστε τις οδηγίες προποσας προσεκτικά πριν εγκαταστήσετε τη συσκευή.

RU Перед установкой данного оборудования внимательно прочитайте инструкцию по технике безопасности.

SR Pre instaliranja ovog uređaja pažljivo pročitate priručnik o predostrožnosti.

HR Pažljivo pročitati mjere opreza prije ugradnje uređaja. PL Przed zainstalowaniem tego urządzenia przeczytaj uważnie instrukcję dotyczącą środków ostrożności. UK Перед тим, як встановлювати цей прилад, уважно прочитайте інструкції з техніки безпеки.

AR اقرأ دليل الاخطارات بعناية قبل تثبيت هذا الجهاز.

MANUALE COSMO-e

IT **ASPIRATORI CENTRIFUGHI / COSMO-e 300**

EN **CENTRIFUGAL DUCT FAN**

FR **AÉRATEUR DE CONDUIT CENTRIFUGE**

DE **RADIALER SCHACHTVENTILATOR**

NL **CENTRIFUGAAL KANAAL VENTILATOR**

DA **CENTRIFUGAL VENTILATOR FOR KANAL**

ES **VENTILADOR CENTRÍFUGO**

DE **DE CONDUCTO**

EL **Φυοκεντρικός εξαεριστήρας αγωγών**

RU **ЦЕНТРОБЕЖНЫЙ КАНАЛЬНЫЙ ВЕНТИЛЯТОР**

SR **CENTRIFUGALNI KANALSKI**

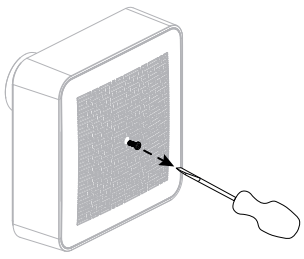
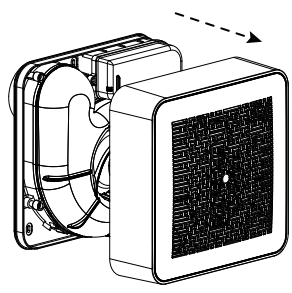
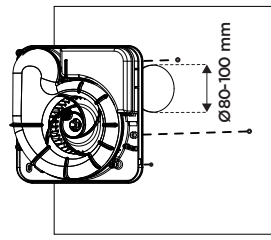
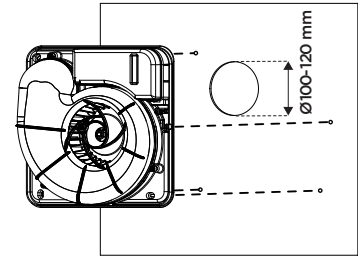
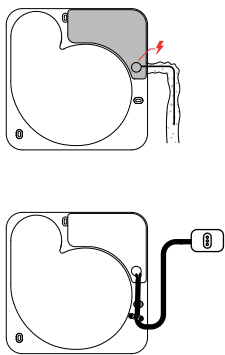
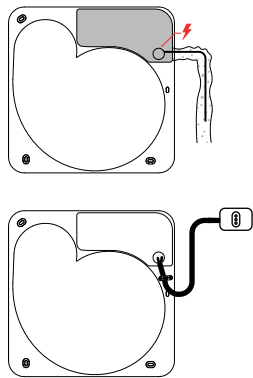
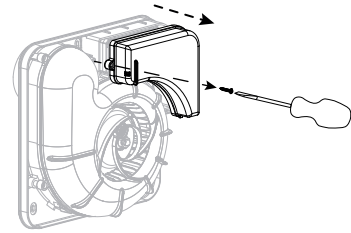
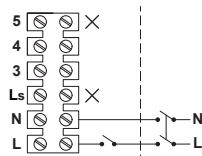
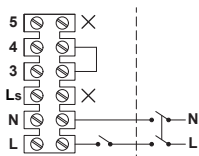
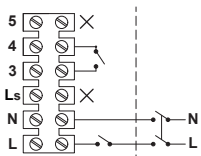
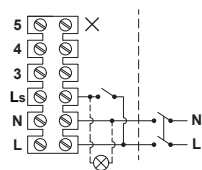
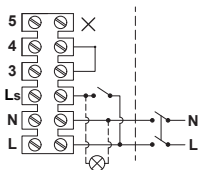
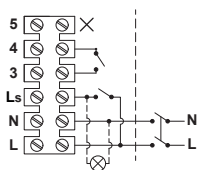
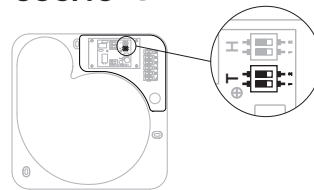
 
 
 
 
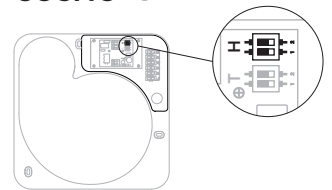
 
 
 
 
HR **CENTRIFUGALNI, KANALSKI VENTILATOR**

PL **WENTYLATOR KANAŁOWE**

ODŠRODKOWE

UK **ВІДЦЕНТРОВИЙ ВЕНТИЛЯТОР**

AR **رؤحة طرف مركزية**

1**2****3a****COSMO-e 100****3b****COSMO-e 300****4a****COSMO-e 100****4b****COSMO-e 300****5****6****ELECTRICAL CONNECTION** ⚡**COSMO-e****COSMO-e T / COSMO-e HT****7****TIMER** ⌚**COSMO-eT
COSMO-eHT****3'****7'****15'****25'****8****HUMIDITY** 💧**COSMO-eHT****40%*****60%*****75%*****90%***

* The declared thresholds are based on test carried out in a climate chamber at a constant temperature of 20°C. The intervention threshold of the humidity sensor can differ from product to product and depends on environmental and atmospheric factors.