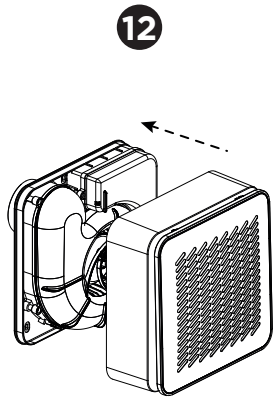
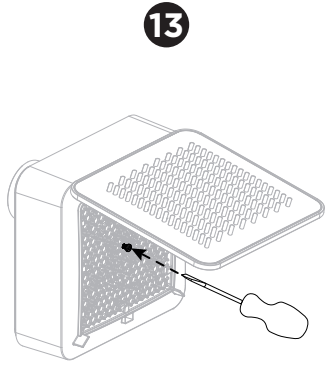



11



12



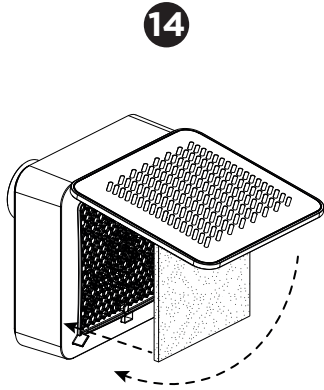
13



14

P06574000

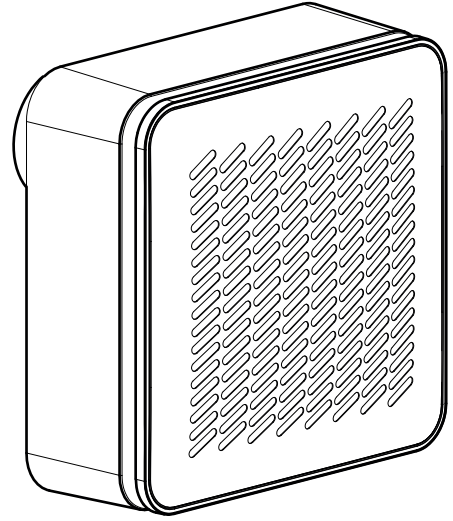GO.ERRE



OMEGA

EP S.p.A.  
Via Del Commercio 1, 25039 - Travagliato (BS) Italy  
tel. +39 030 68 62 341 - fax +39 030 68 62 051 | www.oerre.it - vendite@oerre.it

MANUALE OMEGA

IT Prima di procedere con l'installazione leggere attentamente il manuale delle avvertenze generali. Read the precautions manual carefully before installing this appliance.

FR Avant de procéder à l'installation, il faut lire attentivement le manuel des instructions générales.

DE Bitte lesen Sie sich die Sicherheitshinweise der Gebrauchsanleitung aufmerksam durch, bevor Sie das Gerät installieren.

NL Lees de handleiding met voorzorgsmaatregelen zorgvuldig vooraf u dit apparaat installeert.

DA Læs venligst vejledningen grundigt, inden installation af dette produkt.

ES Lea detenidamente el manual de advertencias antes de instalar este aparato.

EL Διαβάστε τις οδηγίες προποσας προσεκτικά πριν εγκαταστήσετε τη συσκευή.

RU Перед установкой данного оборудования внимательно изучите инструкцию по технике безопасности.

SR Pre instaliranja ovog uređaja pažljivo pročitate priručnik o predostrožnosti.

HR Pažljivo pročitati mjere opreza prije ugradnje uređaja. Przed zainstalowaniem tego urządzenia przeczytaj!

PL Przed zainstalowaniem tego urządzenia przeczytaj! uwaznie instrukcję dotyczącą środków ostrożności.

UK Перед тим, як встановлювати цей прилад, уважно прочитайте інструкції з техніки безпеки.

AR اقرأ دليل الأمان قبل تثبيت هذا الجهاز.

OMEGA

IT ASPIRATORI CENTRIFUGHI

DA CONDOTTO

EN CENTRIFUGAL DUCT FAN

FR AÉRATEUR DE CONDUIT CENTRIFUGE

DE RADIALER SCHACHTVENTILATOR

NL CENTRIFUGAAL KANAAL VENTILATOR

DA CENTRIFUGAL VENTILATOR FOR KANAL

ES VENTILADOR CENTRÍFUGO

DE CONDUCTO

EL Φυλοκεντρικός εξαεριστήρας αγωγών

RU ЦЕНТРОБЕЖНЫЙ КАНАЛЬНЫЙ ВЕНТИЛЯТОР

SR CENTRIFUGALNI KANALSKI

HR CENTRIFUGALNI, KANALSKI

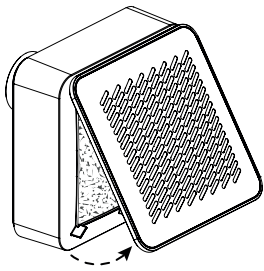
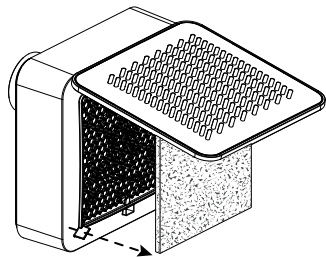
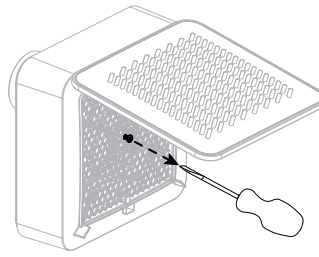
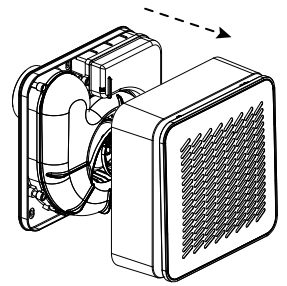
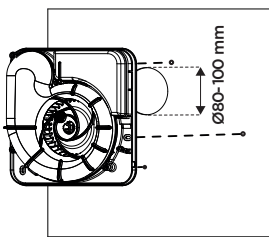
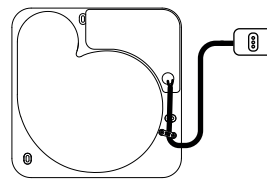
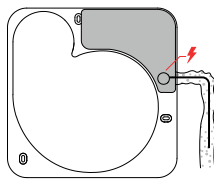
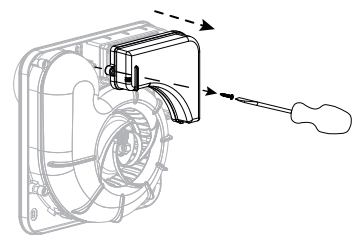
VENTILATOR

PL WENTYLATORY KANAŁOWE

ODŠRODKOWE


UK ВІДЦЕНТРОВИЙ ВЕНТИЛЯТОР

AR روجحة طرف مركزية


**1****2****3****4****5****6****7****8**

### ELECTRICAL CONNECTION
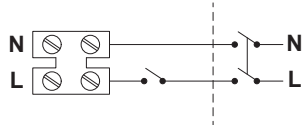
#### OMEGA




#### OMEGA T OMEGA HT

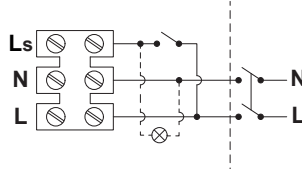**9**



### TIMER
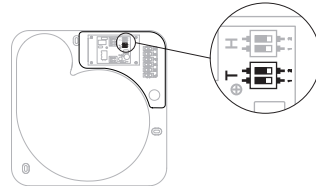
#### OMEGA T OMEGA HT

**10**

### HUMIDITY
 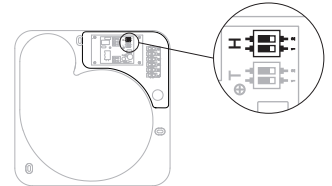
#### OMEGA HT



\* The declared thresholds are based on test carried out in a climate chamber at a constant temperature of 20°C. The intervention threshold of the humidity sensor can differ from product to product and depends on environmental and atmospheric factors.